



REMOTE CONTROLLER

IMPORTANT NOTE:

Thank you for purchasing our air conditioner. Please read this manual carefully before operating your new air conditioning unit. Make sure to save this manual for future reference.

CONTENTS

Remote Controller Specifications02

Handling the Remote Controller03

Buttons and Functions04

Remote Screen Indicators08

 
How to Use Basic Functions09

How to Use Advanced Functions11

Remote Controller Specifications

Model	RG10D(E2S)/BGEF, RG10D2(E2S)/BGEF, RG10D3(E2S)/BGEF, RG10D4(E2S)/BGEF
Rated Voltage	3.0V (Dry batteries R03/LR03×2)
Signal Receiving Range	8m
Environment	-5°C-60°C (23°F-140°F)

Quick Start Guide

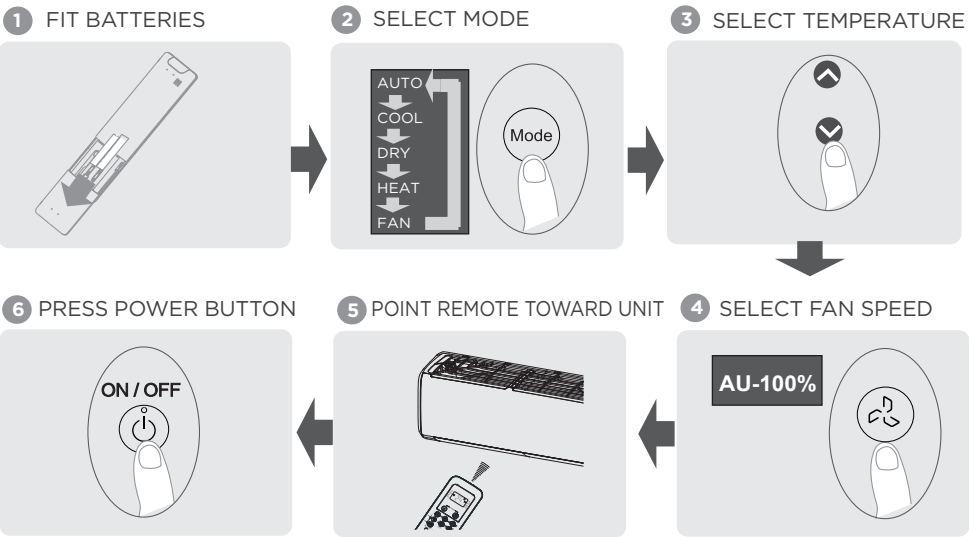

NOT SURE WHAT A FUNCTION DOES?
Refer to the How to Use Basic Functions and How to Use Advanced Functions sections of this manual for a detailed description of how to use your air conditioner.

SPECIAL NOTE

 
- Button designs on your unit may differ slightly from the example shown.
- If the indoor unit does not have a particular function, pressing that function's button on the remote control will have no effect.
- When there are wide differences between “Remote controller Manual” and “USER’S MANUAL” on function description, the description of “USER’S MANUAL” shall prevail.

Handling the Remote Controller

Inserting and Replacing Batteries

Your air conditioning unit may come with two batteries (some units). Put the batteries in the remote control before use.

1. Slide the back cover from the remote control downward, exposing the battery compartment.
2. Insert the batteries, paying attention to match up the (+) and (-) ends of the batteries with the symbols inside the battery compartment.
3. Slide the battery cover back into place.

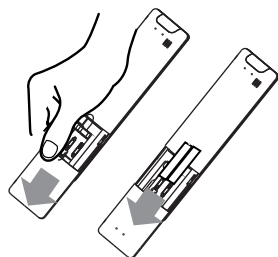

Remote Control

- Direct sunlight can interfere with the infrared signal receiver.
- There must be a clear line of sight between the remote and the appliance.
- If the signals from the remote control happen to control another appliance, move the appliance to another location or contact customer service.

! Battery Disposal

- Do not dispose of batteries as unsorted municipal waste. Refer to local laws for proper disposal of batteries.
- Batteries may have a chemical symbol at the bottom of the disposal icon. This chemical symbol means that the battery contains a heavy metal that exceeds a certain concentration.
- An example is Pb: Lead (>0.004%). Appliances and used batteries must be treated in a specialized facility for reuse, recycling and recovery. By ensuring correct disposal, you will help avoid possible negative consequences for the environment and human health.



Battery Performance

For optimal product performance:

- Do not mix old and new batteries, or batteries of different brands.
- Do not leave batteries in the remote control if you don't plan on using the device for more than 2 months.

Notes For Using Remote Control

The device could comply with the local national regulations.

 
- In Canada, it should comply with CAN ICES-3(B)/NMB-3(B).
- In USA, this device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.


Buttons and Functions

Before you begin using your new air conditioner, make sure to familiarize yourself with its remote control. The following is a brief introduction to the remote control itself. For instructions on how to operate your air conditioner, refer to the **How to Use Basic Functions** section of this manual.

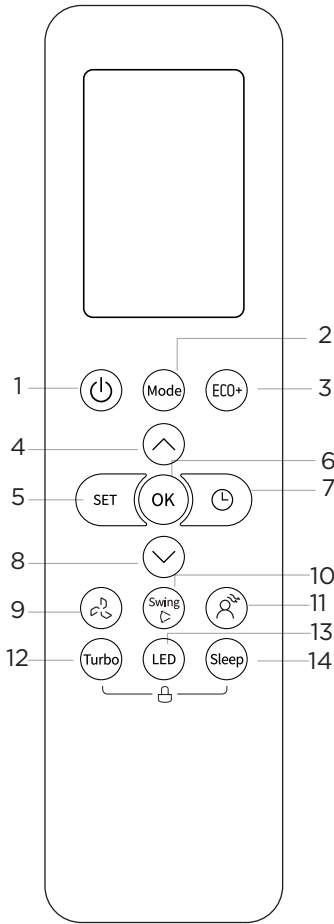

Model:
RG10D(E2S)/BGEF


Description	
1	ON/OFF: Turn the unit on or off.
2	Mode: Auto > Cool > Dry > Heat > Fan Note: Auto and Heat mode are not available for the cooling only appliance.
3	ECO+ : Starts and stops the energy saving operation.
4	Temp Up: Increases temperature in 1°C (1°F) increments. Max. temperature is 30°C (86°F). NOTE: Press together  &  buttons at the same time for 3 seconds will alternate the temperature display between the °C & °F
5	SET: Follow Me > Active clean > Intelligent humidity control > AP mode* [*]: Model dependent
6	OK: Used to confirm the selected functions.
7	Timer: Set timer to turn unit on or off.
8	Temp Down: Decreases temperature in 1°C (1°F) increments. Min. temperature is 16°C (60°F).
9	Fan Speed: AU > 20% >40% > 60% > 80% > 100%. Press the TEMP  or  button to increase/decrease the fan speed in 1% increments.
10	Swing: Starts and stops the horizontal louver movement.
11	Breeze Away: Used to select wind flow away from people feature.
12	Turbo: Enables unit to reach preset temperature in shortest possible time.
13	LED: Turns LED display & air conditioner buzzer on and off.
14	Sleep: Used to save energy during sleeping hours.
15	Lock: Press Turbo and Sleep buttons together simultaneously for 5 seconds to lock the keyboard. Press together these two buttons again for 2 seconds to unlock the keyboard.

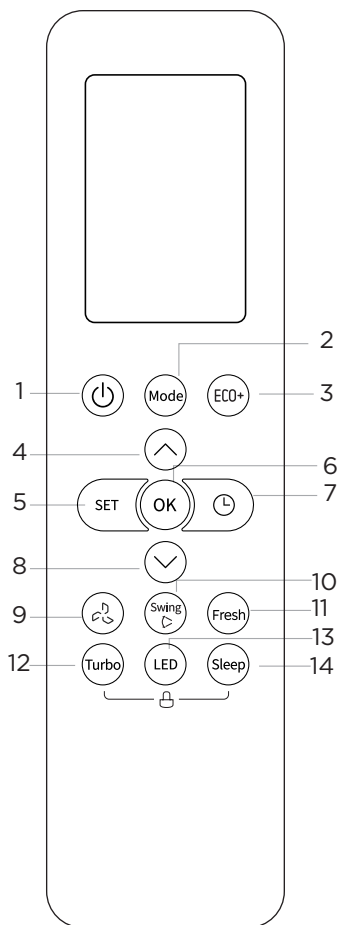 

Model:
RG10D2(E2S)/BGEF

Description


1	ON/OFF: Turn the unit on or off.
2	Mode: Auto > Cool > Dry > Heat > Fan Note: Auto and Heat mode are not available for the cooling only appliance.
3	ECO+ : Starts and stops the energy saving operation.
4	Temp Up: Increases temperature in 1°C (1°F) increments. Max. temperature is 30°C (86°F). NOTE: Press together & buttons at the same time for 3 seconds will alternate the temperature display between the °C & °F
5	SET: Breeze away > Follow Me > Active clean > Intelligent Humidity Control > AP mode* [*]: Model dependent
6	OK: Used to confirm the selected functions.
7	Timer: Set timer to turn unit on or off.
8	Temp Down: Decreases temperature in 1°C (1°F) increments. Min. temperature is 16°C (60°F).
9	Fan Speed: AU > 20% > 40% > 60% > 80% > 100%. Press the TEMP or button to increase/decrease the fan speed in 1% increments.
10	Swing: Starts and stops the horizontal louver movement.
11	Fresh: Used to initiate the Fresh/UV lamp feature.
12	Turbo: Enables unit to reach preset temperature in shortest possible time.
13	LED: Turns LED display & air conditioner buzzer on and off.
14	Sleep: Used to save energy during sleeping hours.
15	Lock: Press Turbo and Sleep buttons together simultaneously for 5 seconds to lock the keyboard. Press together these two buttons again for 2 seconds to unlock the keyboard.

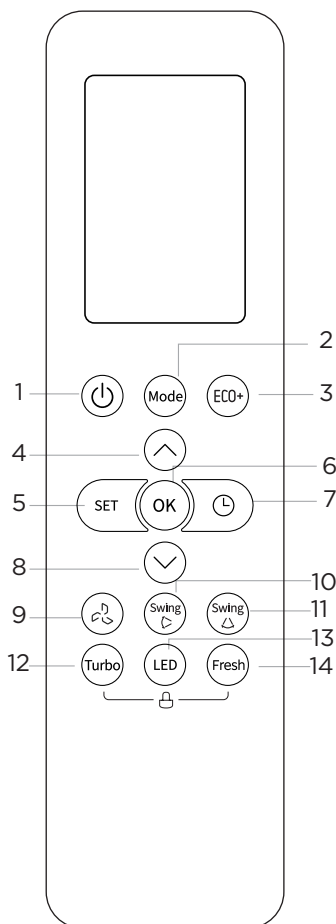 

Model:
RG10D3(E2S)/BGEF

Description

 - 1 **ON/OFF:** Turn the unit on or off.
- 2 **Mode:** Auto > Cool > Dry > Heat > Fan
Note: Auto and Heat mode are not available for the cooling only appliance.
- 3 **ECO+ :** Starts and stops the energy saving operation.
- 4 **Temp Up:** Increases temperature in 1°C (1°F) increments. Max. temperature is 30°C (86°F).
NOTE: Press together  &  buttons at the same time for 3 seconds will alternate the temperature display between the °C & °F
- 5 **SET:** Sleep > Breeze away > Follow Me > Active clean > Intelligent Humidity Control > AP mode*
[*]: Model dependent
- 6 **OK:** Used to confirm the selected functions
- 7 **Timer:** Set timer to turn unit on or off.
- 8 **Temp Down:** Decreases temperature in 1°C (1°F) increments. Min. temperature is 16°C (60°F).
- 9 **Fan Speed:** AU > 20% > 40% > 60% > 80% > 100%.
Press the TEMP  or  button to increase/decrease the fan speed in 1% increments.
- 10 **Swing (up and down) :** Starts and stops the horizontal louver movement.
- 11 **Swing (left and right) :** Starts and stops the vertical louver movement.
- 12 **Turbo:** Enables unit to reach preset temperature in shortest possible time.
- 13 **LED:** Turns LED display & air conditioner buzzer on and off.
- 14 **Fresh:** Used to initiate the Fresh/UV lamp feature.
- 15 **Lock:** Press Turbo and Fresh buttons together simultaneously for 5 seconds to lock the keyboard. Press together these two buttons again for 2 seconds to unlock the keyboard.

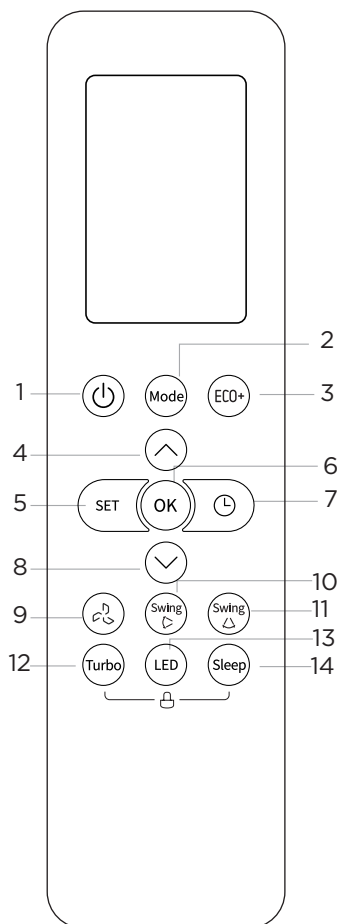


Model:
RG10D4(E2S)/BGEF

Description

- 1 **ON/OFF:** Turn the unit on or off.
- 2 **Mode:** Auto > Cool > Dry > Heat > Fan
Note: Auto and Heat mode are not available for the cooling only appliance.
- 3 **ECO+ :** Starts and stops the energy saving operation.
- 4 **Temp Up:** Increases temperature in 1°C (1°F) increments. Max. temperature is 30°C (86°F).
NOTE: Press together ▲ & ▼ buttons at the same time for 3 seconds will alternate the temperature display between the °C & °F
- 5 **SET:** Breeze away > Follow Me > Active clean > Intelligent Humidity Control > AP mode*
[*]: Model dependent
- 6 **OK:** Used to confirm the selected functions
- 7 **Timer:** Set timer to turn unit on or off.
- 8 **Temp Down:** Decreases temperature in 1°C (1°F) increments. Min. temperature is 16°C (60°F).
- 9 **Fan Speed:** AU > 20% > 40% > 60% > 80% > 100%.
Press the TEMP ▲ or ▼ button to increase/decrease the fan speed in 1% increments.
- 10 **Swing (up and down) :** Starts and stops the horizontal louver movement.
- 11 **Swing (left and right) :** Starts and stops the vertical louver movement.
- 12 **Turbo:** Enables unit to reach preset temperature in shortest possible time.
- 13 **LED:** Turns LED display & air conditioner buzzer on and off.
- 14 **Sleep:** Used to save energy during sleeping hours.
- 15 **Lock:** Press Turbo and Sleep buttons together simultaneously for 5 seconds to lock the keyboard. Press together these two buttons again for 2 seconds to unlock the keyboard.

Remote Screen Indicators

 Information is displayed when the remote controller is power up.

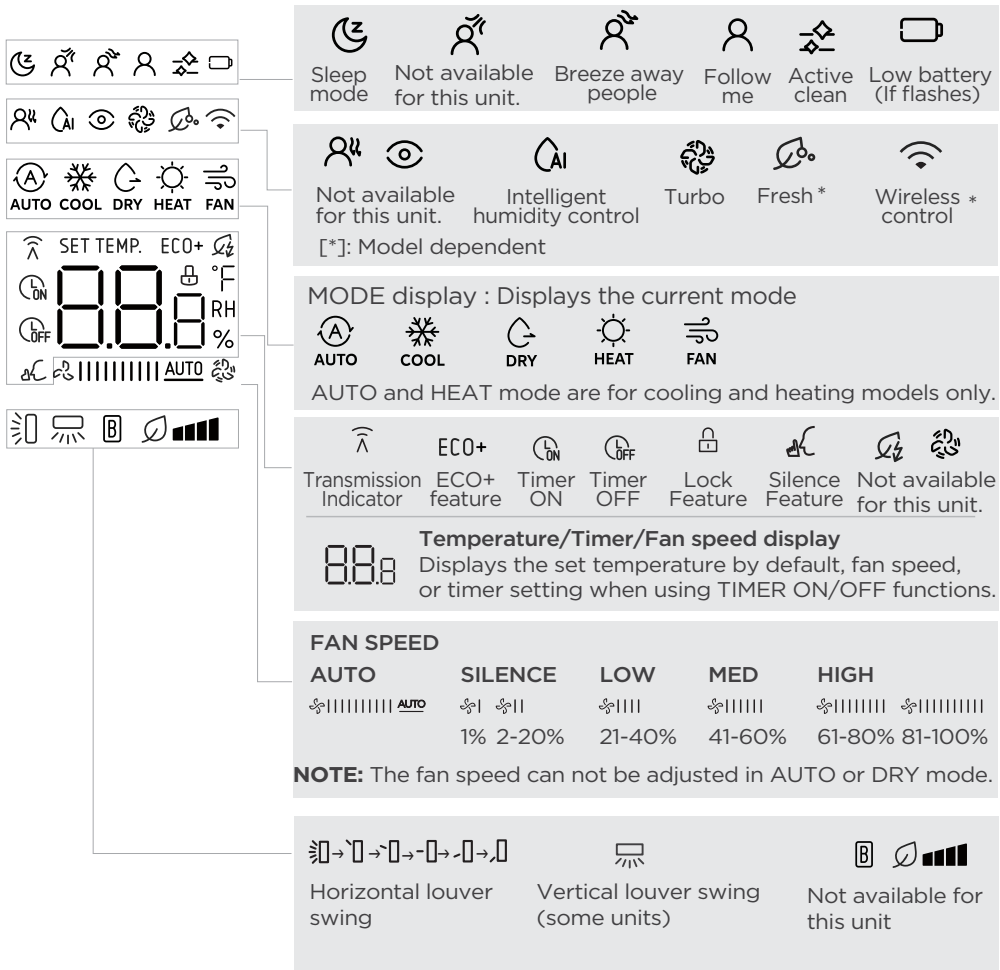

Note:

All indicators shown above are for information purposes. During the actual operation, only the relevant indicators will be shown on the display.

How to Use Basic Functions

NOTE

Before operation, please ensure the unit is plugged in and power is available.

AUTO Mode

Select AUTO mode Set your desired temperature Turn on the air conditioner



Note:

1. In AUTO mode, the unit will automatically select the COOL, FAN, or HEAT function based on the selected temperature.
2. In AUTO mode, fan speed cannot be set.

COOL or HEAT Mode

Select COOL/HEAT mode Set the temperature Set the fan speed Turn on the air conditioner



Note: Heat mode is only applicable to the Cooling & Heating models only.

DRY Mode

Select DRY mode Set your desired temperature Turn on the air conditioner



Note: In DRY mode, fan speed cannot be set since it has already been automatically controlled.

FAN Mode

Select FAN mode Set the fan speed Turn on the air conditioner



 
Note: In FAN mode, you can't set the temperature. As a result, no temperature is displayed on the remote's screen.

Setting the TIMER

TIMER ON/OFF - Set the amount of time after which the unit will automatically turn on/off.

TIMER ON setting


Press TIMER button to initiate the time ON sequence.

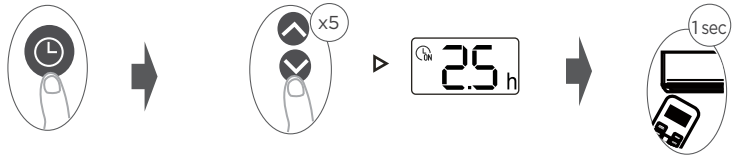

TIMER OFF setting

Press TIMER button to initiate the time OFF sequence.

 Press Temp. up or down buttons to set the length of time after which you would like the unit to turn OFF. Wait for 1 second to activate time to turn off the unit.


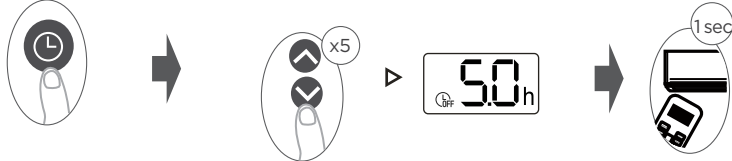


Note:

- 1. When setting the TIMER ON or TIMER OFF, the time will increase in 30 minutes increments with each press, up to 10 hours. After 10 hours and up to 24, it will increase in 1-hour increments. (For example, press 5 times to get 2.5h and press 10 times to get 5h). The timer will revert to 0.0 after 24.
- 2. Cancel either function by setting the timer to 0.0h.

TIMER ON & OFF setting (example)

  Keep in mind that the time periods you set for both functions refer to hours after the current time.

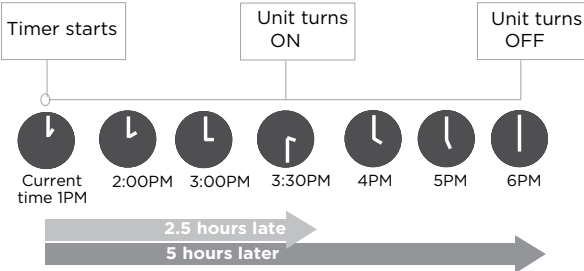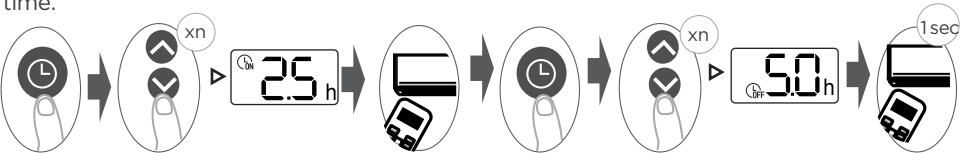


Example: If current timer is 1:00PM, to set the timer as above steps, the unit will turn on 2.5h later (3:30PM) and turn off at 6:00PM.

How to Use Advanced Functions

Swing function

 Press Swing button

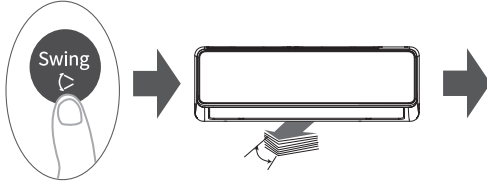


Press this button repeatedly, and if the interval between presses is within 3 seconds, the horizontal louver will operate in the following order:

Louver auto swing stop > Louver auto swing start > Louver angle 1 > Louver angle 2 > Louver angle 3 > Louver angle 4 > Louver angle 5.

Press this button repeatedly, and if the interval between presses is more than 3 seconds, the horizontal louver will operate in the following order:

Louver at a certain angle > Louver auto swing start > Louver auto swing stop.

 For models of RG10D3(E2S)/BGEF, RG10D4(E2S)/BGEF

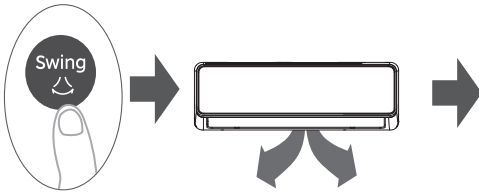

Press this button, the vertical louver will swing left and right automatically.

LED DISPLAY



 
Press this button to turn on and turn off the display on the indoor unit.



Press this button more than 5 seconds (some units)

Keep pressing this button more than 5 seconds, the indoor unit will display the actual room temperature. Press more than 5 seconds again will revert back to display the setting temperature.

FP function

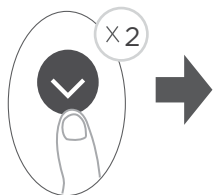


The unit will operate at high fan speed (while compressor on) with temperature automatically set to 8°C/46°F (for some units) .

Note: This function is for heat pump air conditioner only.

Press this button 2 times during one second under HEAT Mode with setting temperature of 16°C/60°F to activate FP function. Press On/Off, Mode, Fan and Temp. button while operating will cancel this function.

 Turbo Function

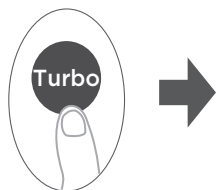


When you select Turbo feature in COOL mode, the unit will blow cool air with strongest wind setting to jump-start the cooling process.

When you select Turbo feature in HEAT mode, the unit will blow heat air with strongest wind setting to jump-start the heating process (some units).

For units with Electric heat elements, the Electric HEATER will activate and jump-start the heating process.

Breeze away feature

 (For model RG10D3(E2S)/BGEF)

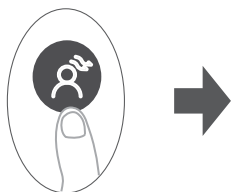


This feature avoids direct air flow blowing on the body and makes you feel indulging in silky coolness.

NOTE: This function is only available under COOL, Dry or Fan mode. The Swing and Turbo functions will be cancelled when Breeze away feature is activated.

Press ON/OFF, Mode, Swing, Turbo buttons or select Active clean feature while operating will cancel Breeze away function.

 Silent function

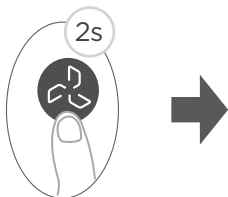

Keep pressing Fan button for more than 2 seconds to activate/disable silent function (some units).

Due to low frequency operation of compressor, it may result in insufficient cooling capacity.

ECO+ function



Press this button when in Cool/Heat mode, the fan speed will change to Auto, the set temperature will remain unchanged which brings more comfortable feelings and power-saving, and reduces temperature fluctuations.

Note: This function is only available when the unit is in Cool or Heat mode. The Turbo and Silent function will be cancelled when the ECO+ function is activated. Initiating the Active clean, Turbo, FP, Silent function or pressing the Mode or ON/OFF button will cancel the ECO+ function.

SLEEP function



Note: The SLEEP function is not available in FAN and DRY mode. The SLEEP function is used to decrease energy use while you sleep (and don't need the same temperature settings to stay comfortable).

The fan speed can be adjusted in Cool/Heat mode. In Auto mode, the fan speed is fixed.

Note: After the sleep function is activated, the system will automatically remember the set temperature within 30 minutes. The next time it is activated, it will start running at the temperature of the last memory. After the sleep function is activated, it will automatically be cancelled after 9 hours.

 
Fresh function



For models of RG10D2(E2S)/BGEF and RG10D3(E2S)/BGEF


Press the Fresh button, the Ionizer or UV-C lamp (model dependent) will be activated. If has both features, these two features will be activated at the same time. This function will help to purify the air in the room.

Louver reset function (some units)

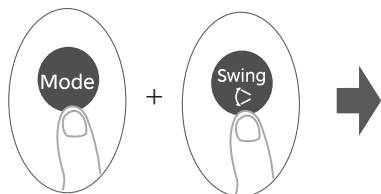

Turn off system from remote control and then press “Mode” and “Swing” button together until hear beep sound from indoor. The indoor is into louver re-set mode. Do not press any button and it is completing the process automatically.

 SET function

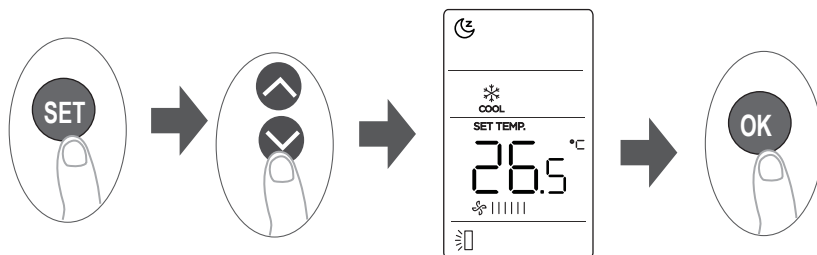

- Press the SET button to enter the function setting, then press SET button or TEMP ▼ or ▲ TEMP button to select the desired function. The selected symbol will flash on the display area, press the OK button to confirm.
- To cancel the selected function, just perform the same procedures as above.
- Press the SET button to scroll through operation functions as follows:

Sleep () > Breeze away () > Follow Me () > Active clean () > Intelligent humidity control () > AP mode () *

[*]: Model dependent.

Note: If your remote controller has Breeze away, Intelligent humidity or Sleep button, you can not use the SET button to select this feature.

Breeze away Function

This feature avoids direct air flow blowing on the body and makes you feel indulging in silky coolness.

Note: This feature is available under cool, Fan and Dry mode only.

Follow Me Function

The FOLLOW ME function enables the remote control to measure the temperature at its current location and send this signal to the air conditioner in 3-minute intervals. When using AUTO, COOL or HEAT modes, measuring ambient temperature from the remote control (instead of from the indoor unit itself) will enable the air conditioner to optimize the temperature around you and ensure maximum comfort.

NOTE: Press and hold Turbo button for 7 seconds to start/stop the memory feature of the Follow Me function.

- If the memory feature is activated, “On” displays for 3 seconds on the screen.
- If the memory feature is stopped, “OF” displays for 3 seconds on the screen.
- While the memory feature is activated, pressing the ON/OFF button, shifting the mode or a power failure will not cancel the Follow Me function.

Active Clean Function

The Active Clean technology removes dust and mold that may cause odors. Active Clean rapidly freezes and thaws the heat exchanger, to clean away material that has adhered to it.

When this function is turned on, the indoor unit displays “CL”. After 20 to 130 minutes, the unit will turn off automatically and terminate CLEAN function.

Intelligent Humidity Control function

When this function is activated, the fan speed will change to Auto, the set temperature will remain unchanged. The system can control the room humidity to ensure that it is not too dry or too damp while maintaining a comfortable temperature.

NOTE: This function is only available when the unit is in Cool mode.

When the Intelligent Humidity Control function is activated, the Turbo, Silent, ECO+ or Active clean function will automatically exit if it is enabled on the machine.

When turning the unit off or initiating the Active Clean or ECO+ function, the Intelligent Humidity Control function will automatically exit.

AP Function(some units)

Use the SET button to choose AP (Access Point) mode to enable wireless configuration. If this function is not available on this unit, it might be possible to enter AP mode by pressing the LED button 7 times in 10 seconds.

Sleep Function

Use this feature to decrease energy use while you sleep. When the sleep function is activated, the air conditioner will intelligently adjust temperature, fan speed to provide a more comfortable sleeping environment.

Under sleep operation, the system will automatically remember the set temperature within 30 minutes. The next time it is activated, it will start running at the temperature of the last memory. After the sleep function is activated, it will automatically be cancelled after 9 hours.



LEADERSHIP AND EXCELLENCE SINCE 1904

CORPORATE OFFICE & PARTS SALES CENTER

Hyatt Centre, Ortigas Avenue, Wack-Wack, Mandaluyong City
Tel. No.: (02) 8823-8883 Loc. 316 to 322 Globe : 0977-8-KOPPEL (0977-8-567735)
Sun : 0925-8-KOPPEL (0925-8-567735) Smart : 0998-8-KOPPEL (0998-8-567735)

MANUFACTURING PLANT

Industry Drive, Carmelray Industrial Park 1,
Canlubang, Calamba City, Laguna
Tel. No.: (02) 8823-8883

ILOILO

Door 8-10 NSB Bldg. Rizal
Street, Lapuz, Iloilo City
Tel. No.: (033) 330-2926

DAVAO

Buhangin Road Center
Ladiadawa Avenue,
Buhangin Davao City T
el. No.: (082) 308-1403

CEBU

Door 1 & 2, Rozen Bldg.
A. Cortez Avenue, Mandaue City
Tel. No.: (032) 346-7278
Fax No.: (032) 346-7279

CAGAYAN DE ORO

CDO 78-78 Warehouse, Warehouse 1,
Zone 5, Cugman National Highway,
Cagayan de Oro City
Tel. No.: (088) 880-6326



www.koppel.ph



[/koppelph](https://www.facebook.com/koppelph)



[@koppelph](https://www.instagram.com/koppelph)



*All specification are subject to change without prior notice for continuous product improvement.